



Blower Model - RB500

Part NO.	Sr.NO.	Description	Qty/pcs
3420.1.02	1	Wind pipe	1
3344.1.10	2	Wind pipe ring	1
3346.1.05	3	Left wind housing	1
3224.1.50	4	Tapping Screw	11
3241.1.12	5	Nut	1
3326.1.09	6	Fan	1
3346.1.06	7	Right wind housing	1
3224.1.51	8	Tapping Screw	4
3231.1.49	9	Pan washer	1
272.1.04	10	Bearing	1
3224.1.52	11	Tapping Screw	2
3830.3.65	12	Armature	1
272.1.82	13	Ball Bearing	1

3324.1.53	14	Tapping Screw	2
3820.3.65	15	Stator	1
3278.1.27	16	Handle cover	1
3330.1.37	18	Switch	1
3501.1.25	19	PCB	1
3279.1.32	20	Cord clamp	1
3360.1.68	21	Cord Jacket	1
290.24	22	Cord plug	1
3260.1.29	23	Motor mounting	1
3350.1.23	24	Detail label	1
3350.1.24	25	Logo label	1
3252.1.26	26	Brush holder	2
3251.1.35	27	Carbon Brush	1
3253.1.24	28	brush cover	2
3501.3.01	29	Dust bag Assembly	1
3501.1.26	29-a	dust bag	1

3501.1.27	29-b	steel wire frame	1
3501.1.28	29-c	dust bag loop	1