



20	WIND COVER UP	3365.1.06
21	HEAD CAPSULE	3366.1.01
22	BEARING 6004	3272.1.03
23	BEARING COVER	3312.1.04
24	NUT M20	3604.1.34
25	ROTOR/ARMATURE	3830.3.30
26	BEARING 6000	3272.1.04
27	RUBBER BUSHING	3274.1.05
28	WIND SHEILD	3366.1.02
29	SCREW ST5X60	3602.1.09
30	STATOR/FIELD	3820.3.30
31	ENCLOSURE	3440.1.01
32	BACK COVER	3623.1.01
33	SCREW ST4X16	3602.1.04
34	SCREW M4X10	3220.1.97
35	RIGHT HANDLE	3329.1.47
36	INDICATING LAMP COVER	3405.1.01
37	SWITCH	3330.1.01
38	CABLE CLAMP	3279.1.01
39	SCREW ST4X14	3602.1.06
40	CABLE SHEATH	3291.1.23
41	CABLE AND PLUG	3291.1.24
42	INDICATING LAMP	3405.1.02
43	RIGHT HANDLE COVER	3329.1.48
44	SCREW ST4X14	3602.1.06
45	BRUSH HOLDER	3252.1.23
46	CARBON BRUSH	3251.1.30
47	BRUSH HOLD CAP	3253.1.07
48	LEFT HANDLE	3329.1.49
49	INNER HEXAGON SCREW MSX25	3602.1.07
50	LEFT HANDLE COVER	3278.1.25
51	LEFT HANDLE BASE	3278.1.26
52	SCREW M4X16	3602.1.08
53	FIXING	3221.1.02
54	GUIDE RULE	3221.1.03
55	REAR FOOT BENDS	3221.1.04

<b>56</b>	<b>SPANNER 17</b>	<b>3399.1.27</b>
<b>57</b>	<b>SPANNER 24</b>	<b>3399.1.28</b>
<b>58</b>	<b>BENDING FOOT</b>	<b>3221.1.05</b>